


# Internet Modem Self-Install Instructions

## In this kit you will receive:

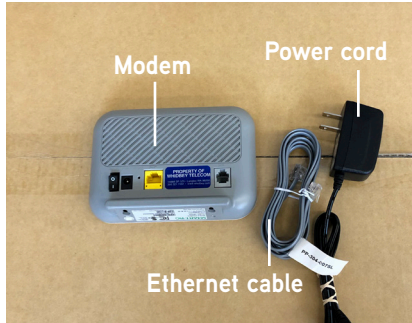

- Whidbey Telecom modem  
(Your modem may look different than above.)
- Power cord
- Ethernet cable  
(May be either yellow, blue, white, black or grey. The color does not matter.)

## Step One: Connect Modem



- Connect one end of the ethernet cable to the wall connection, and then connect the other end to the modem.
- Connect the power cord to the modem, and then plug the other end into an electrical outlet.

## Step Two: Activate Equipment



- Wait for the internet light on the modem to turn a solid color. This may take up to 12 minutes.
- After 12 minutes, the power light and internet light will be steady. Other indicator lights will blink periodically.

## Step Three (Optional): Connect HOP WiFi®



If you are also connecting our HOP WiFi, please refer to the instructions on the opposite side.